

Update Instructions

Requirements:

- AT-USB-EX100-TX
- AT-USB-EX100-RX
- Firmware file
- USB Update Tool
- Computer running Windows
- USB-A to USB micro-B cable



IMPORTANT: The AT-USB-EX100-KIT should be updated as a kit, and the TX and RX should be connected via their HDBaseT connectors prior to the firmware update. *The update process can take up to 5 minutes.*



1. Disconnect power from the AT-USB-EX100-TX.
2. Connect a USB-A to USB micro-B cable between the PC and the **FW** port on the AT-USB-EX100-TX.
3. Reconnect power to the AT-USB-EX100-TX and AT-USB-EX100-RX.
4. Connect an HDBaseT cable from the **HDBaseT OUT** port on the transmitter to the **HDBaseT IN** port on the receiver.
5. The **PWR** LED indicator on the AT-USB-EX100-TX will start flashing.
If a drive folder opens automatically, note the drive letter and close the folder.
6. Launch the USB Update Tool.

When launching the USB Update Tool for the first time, the following dialog may be displayed. Click the **More info** link.



Update Instructions

Click the **Run anyway** button.

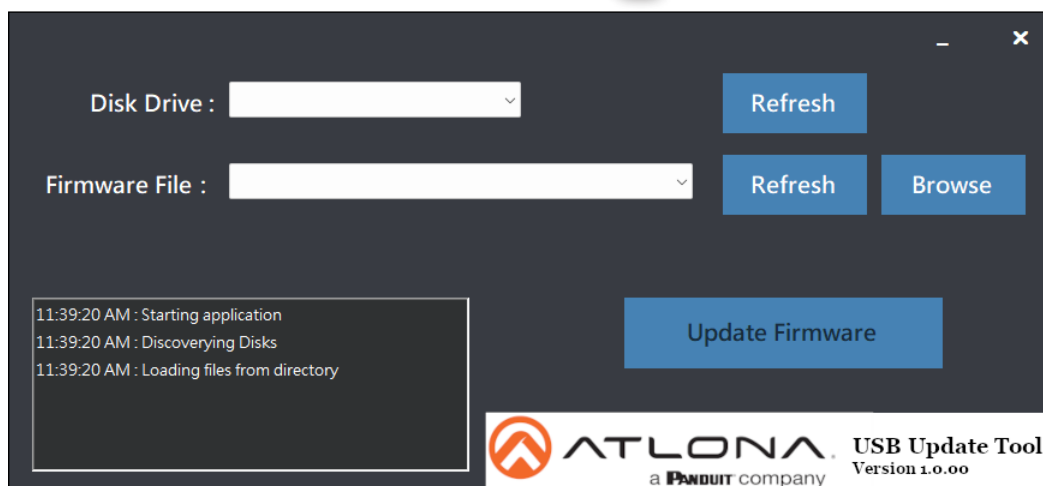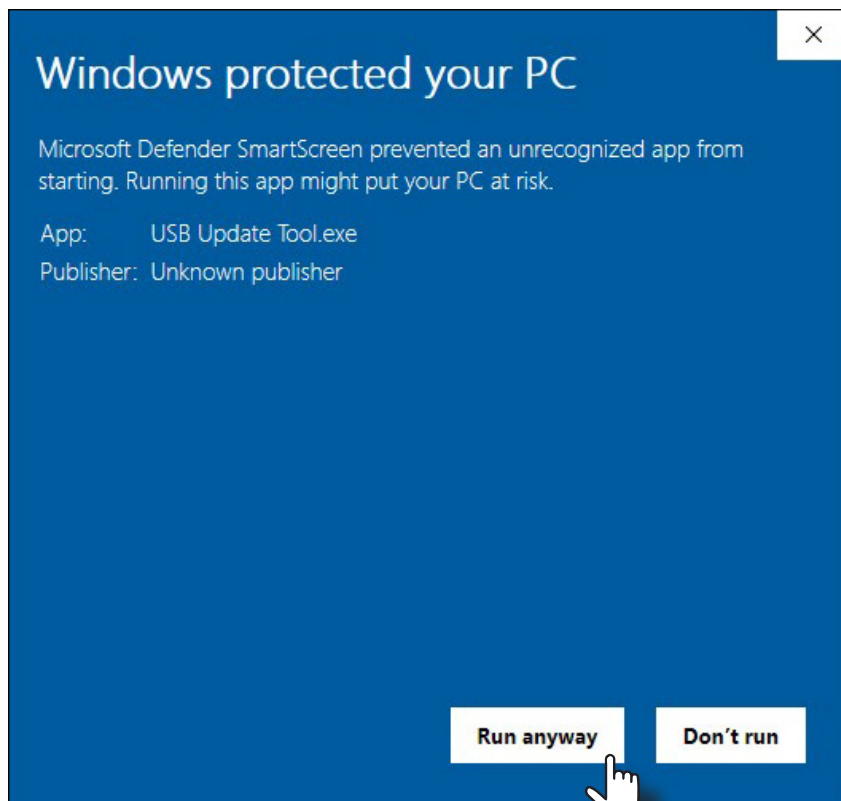

7. Click the **Disk Drive** drop-down list to select the drive.
8. Click the **Browse** button and select the firmware file.
9. Click the Update Firmware button to begin the firmware update process.
10. The **PWR** LED indicator on the front panel will flash green while the unit is being updated. Do not disconnect the USB cable during the update process. When the **PWR** LED stops flashing and is solid green, the update process will be complete.
11. Disconnect the USB cable from the unit.
12. The firmware update process is complete.